


0000E00 "GATE0560

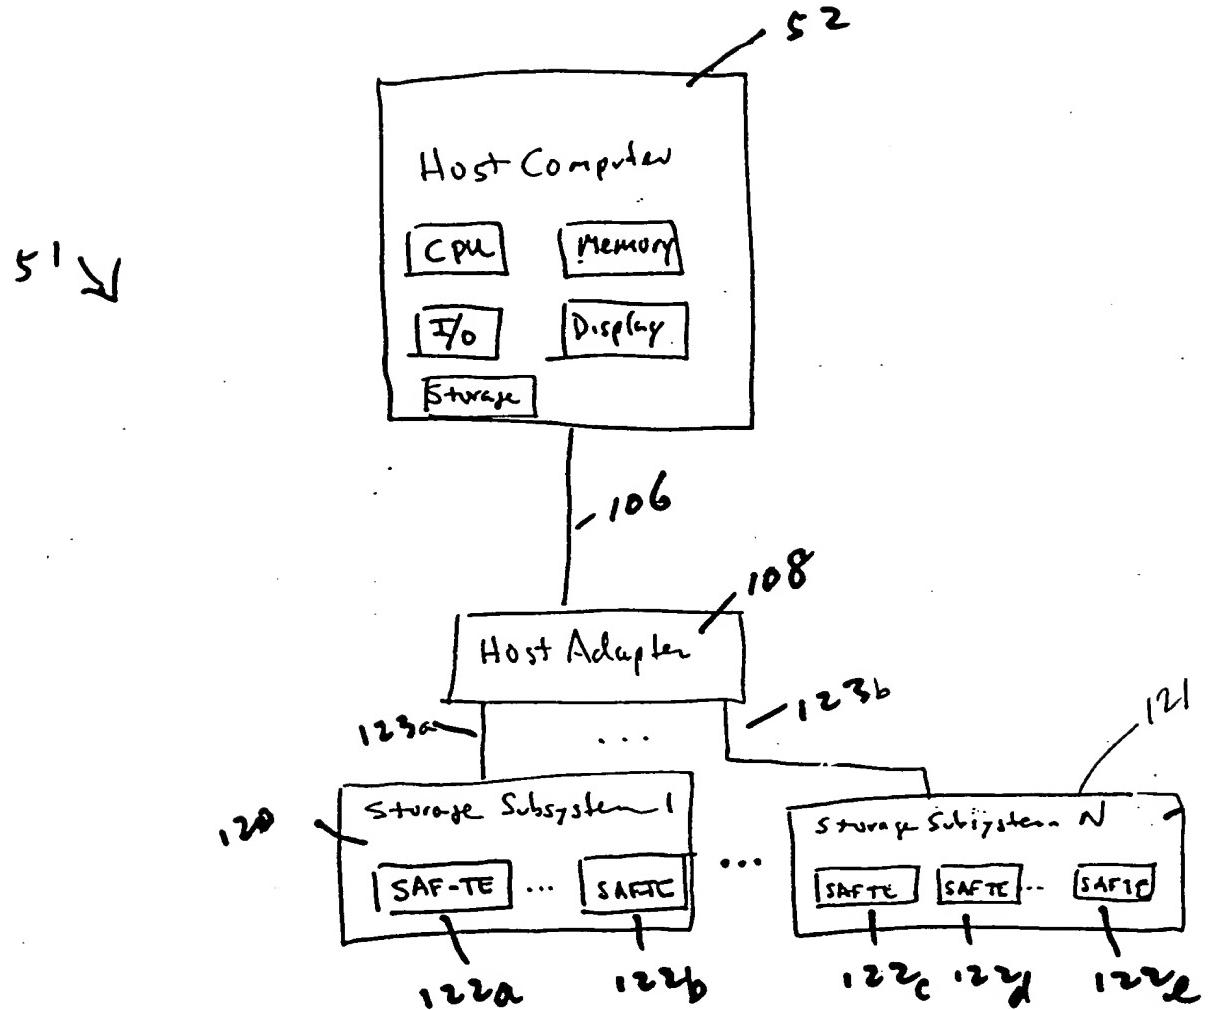

F16. 1

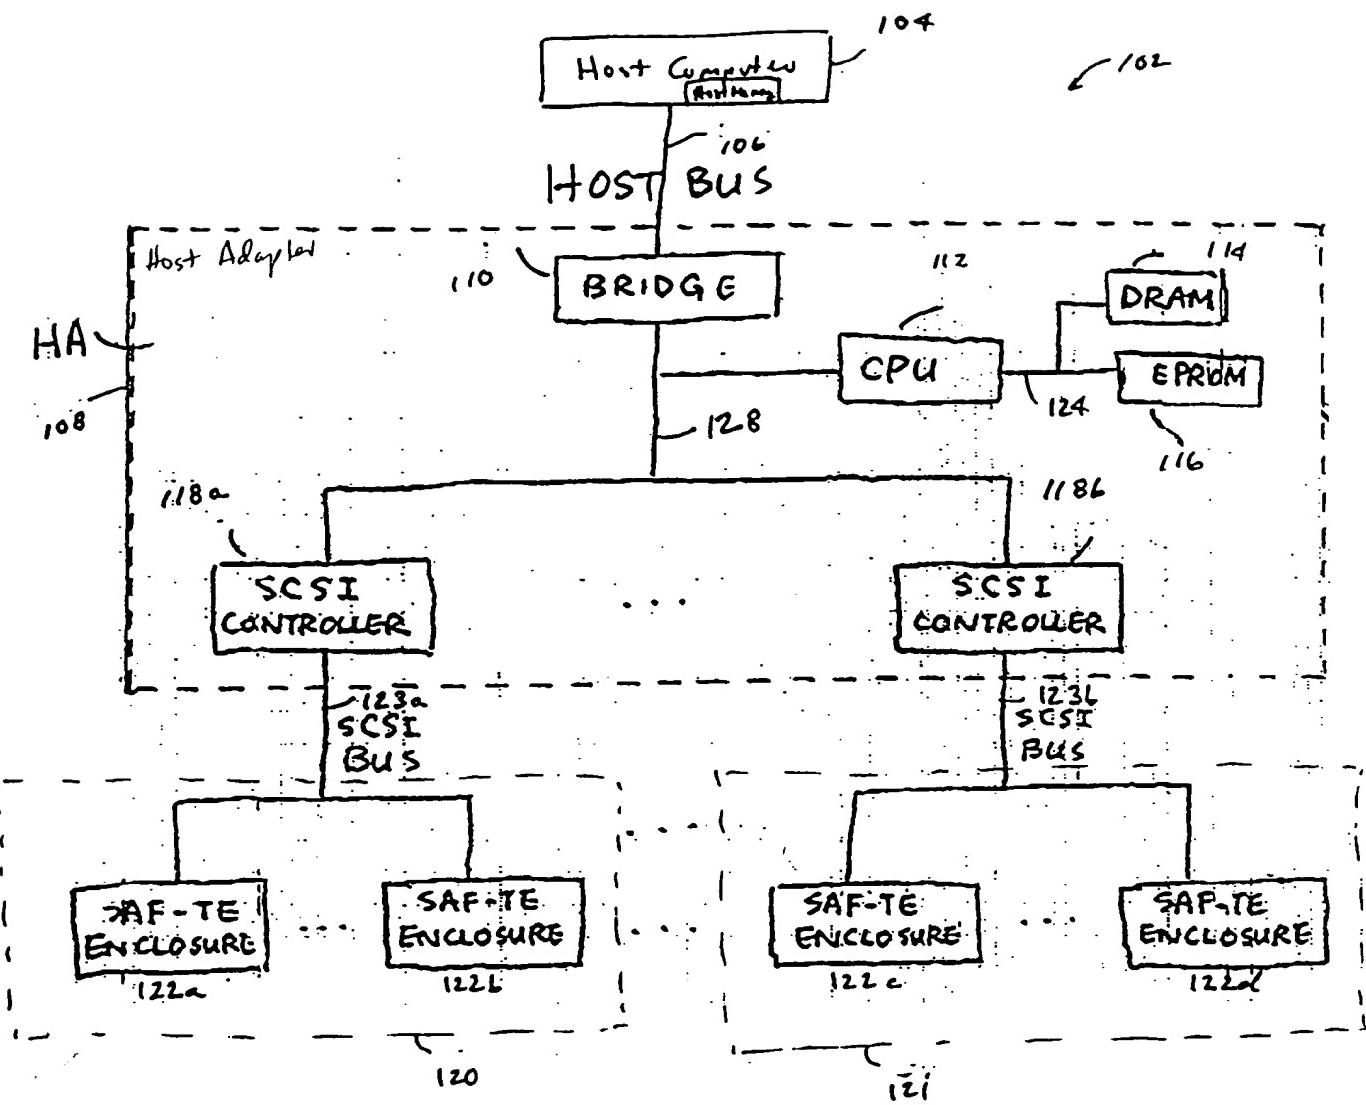


FIG. 2

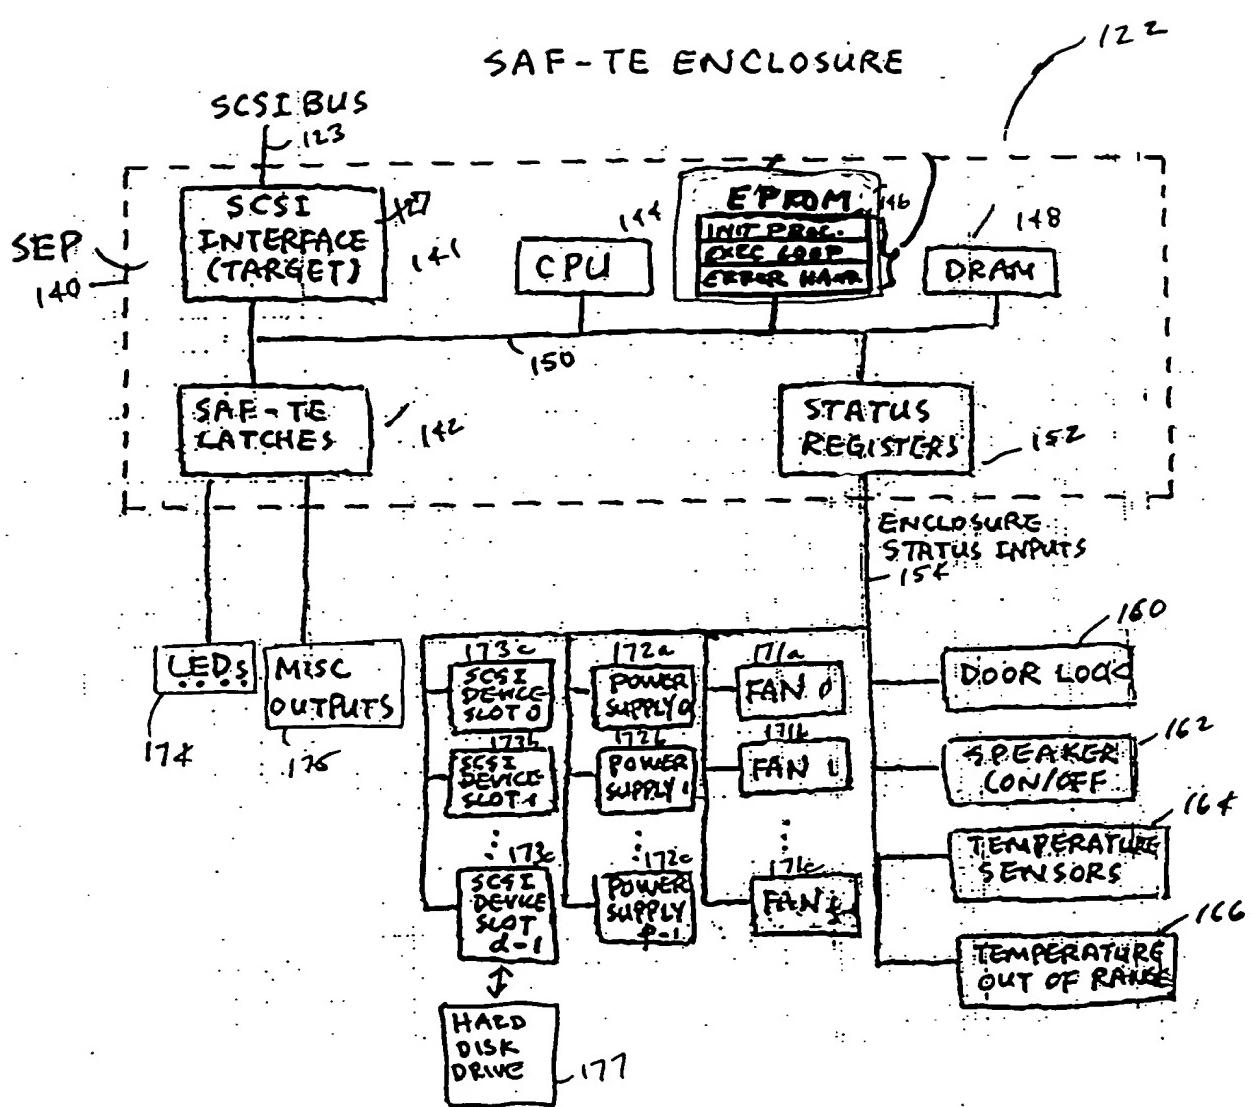


FIG. 3

SELECTION OF A SET OF COMMANDS
TO USE ON THE SAF-TE ENCLOSURE

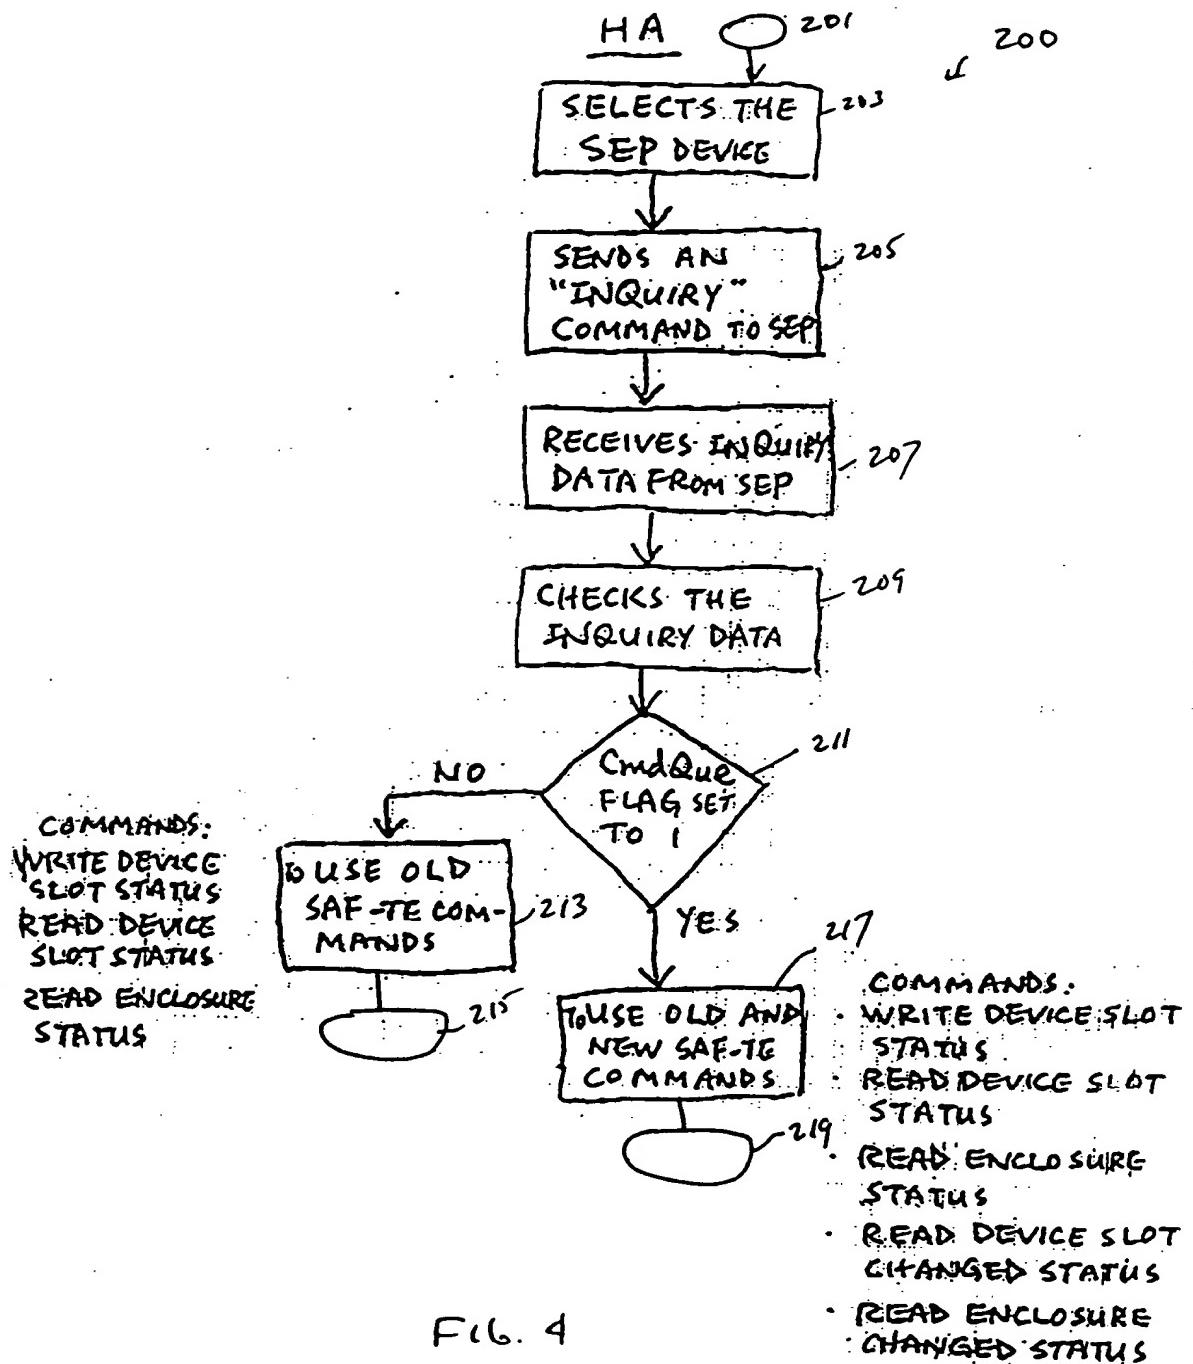


FIG. 4

REQ. DEVICE SLOT CHANGED STATUS (OR READ
ENCLOSURE CHANGED STATUS) COMMAND OPERATION

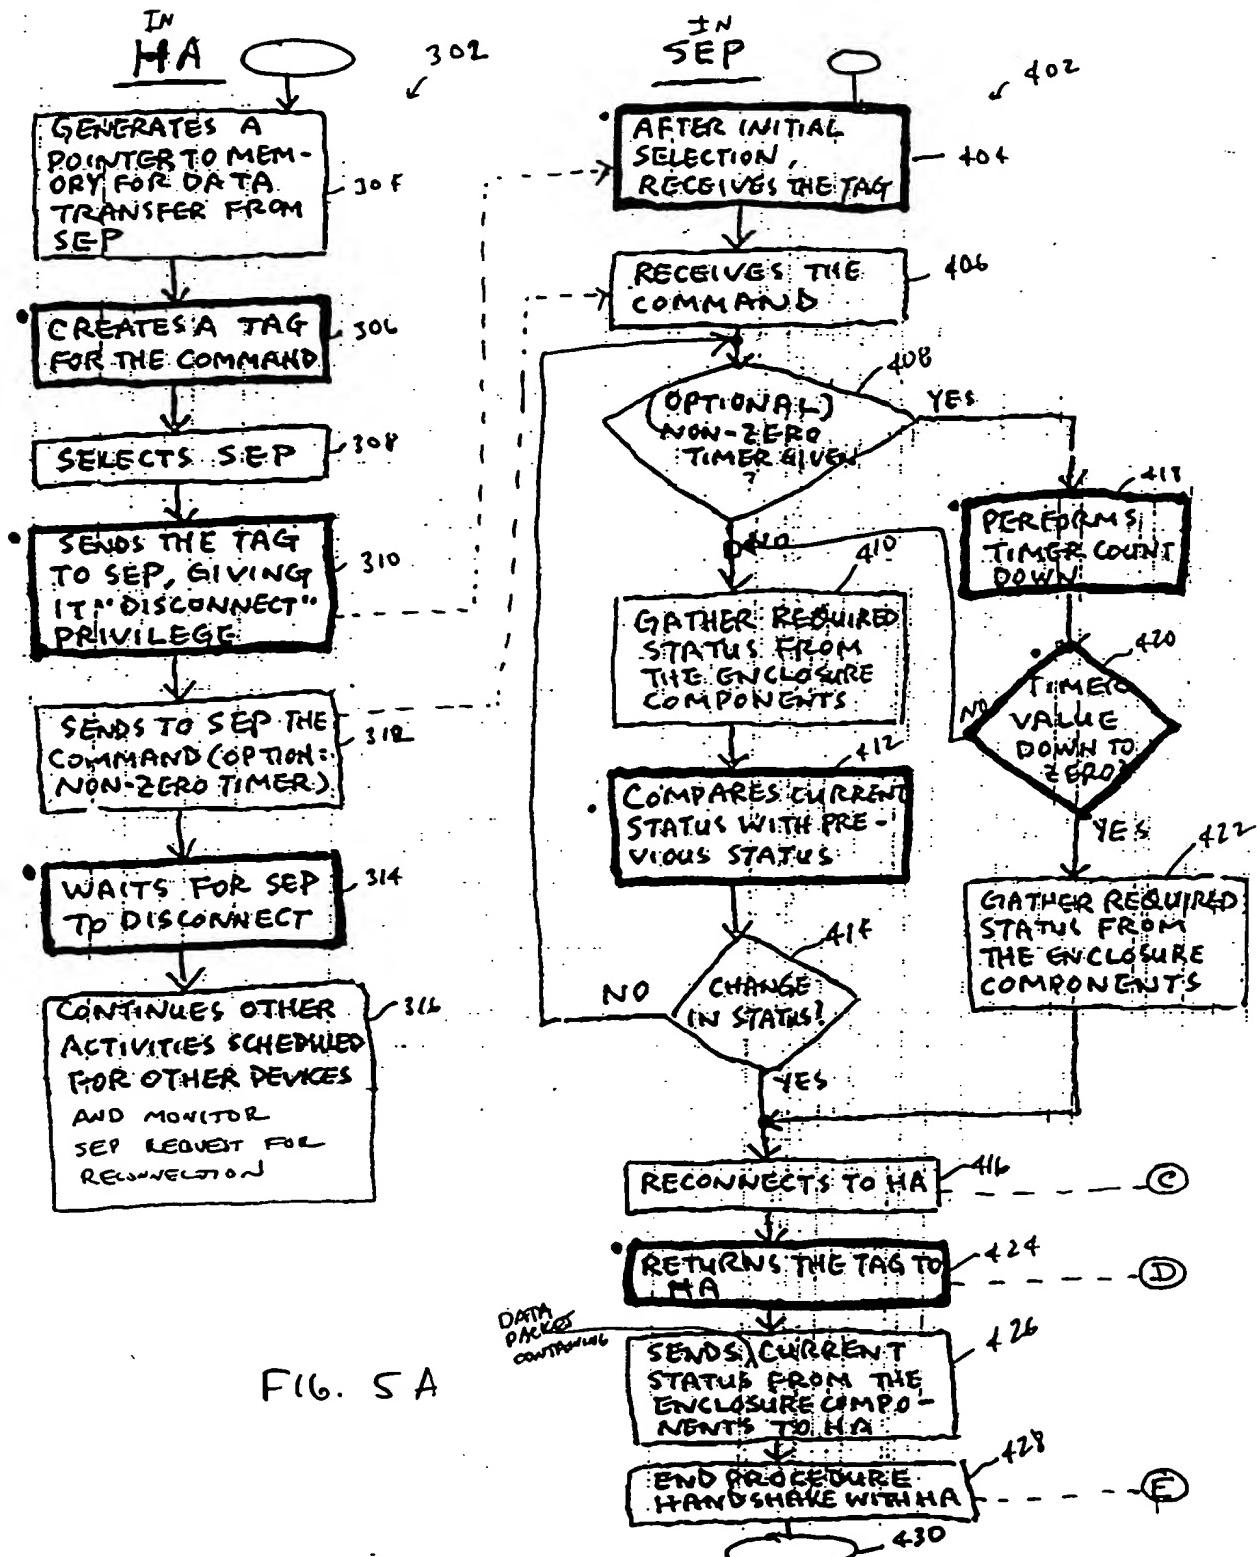


FIG. 5 A

READ DEVICE SLOT CHANGED STATUS (OR READ
ENCLOSURE CHANGED STATUS) COMMAND OPERATION
(CONTINUED)

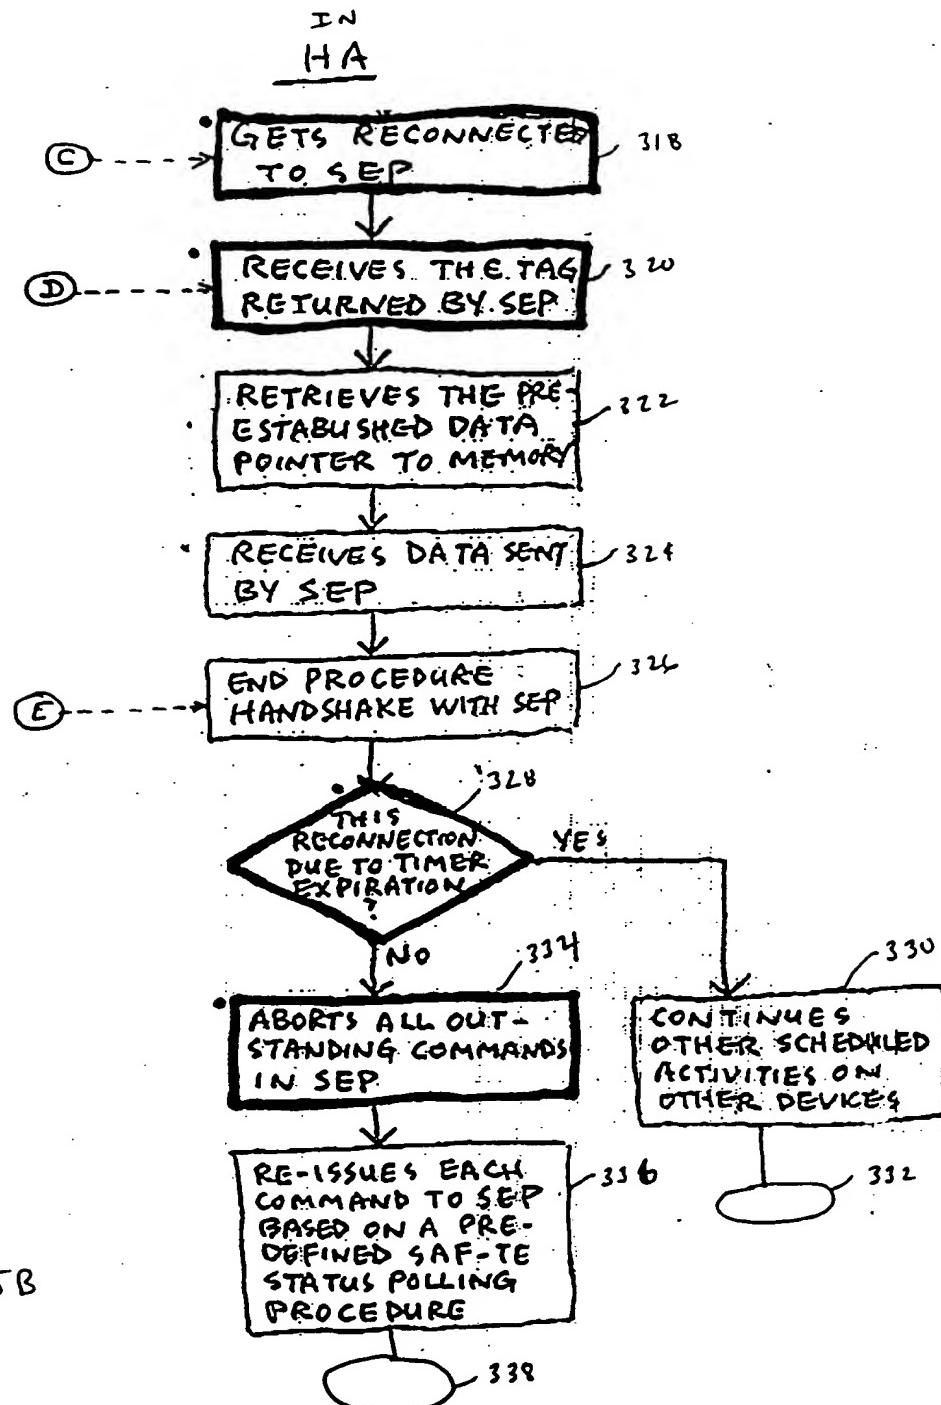


FIG. 5B